




QUICK INSTALLATION GUIDE

- 📶 MOUNT BOILER ALERTS MODULE NEAR CONTROL PANEL
- 📶 USE 18 GAUGE LOW VOLTAGE WIRING
- 📶 MOUNT RIB RELAYS AS CLOSE TO CONTROLS AS POSSIBLE
- 📶 RUN WIRES FROM RIB RELAY TO MODULE
- 📶 LOG ONTO PORTAL & CHECK INSTALLATION

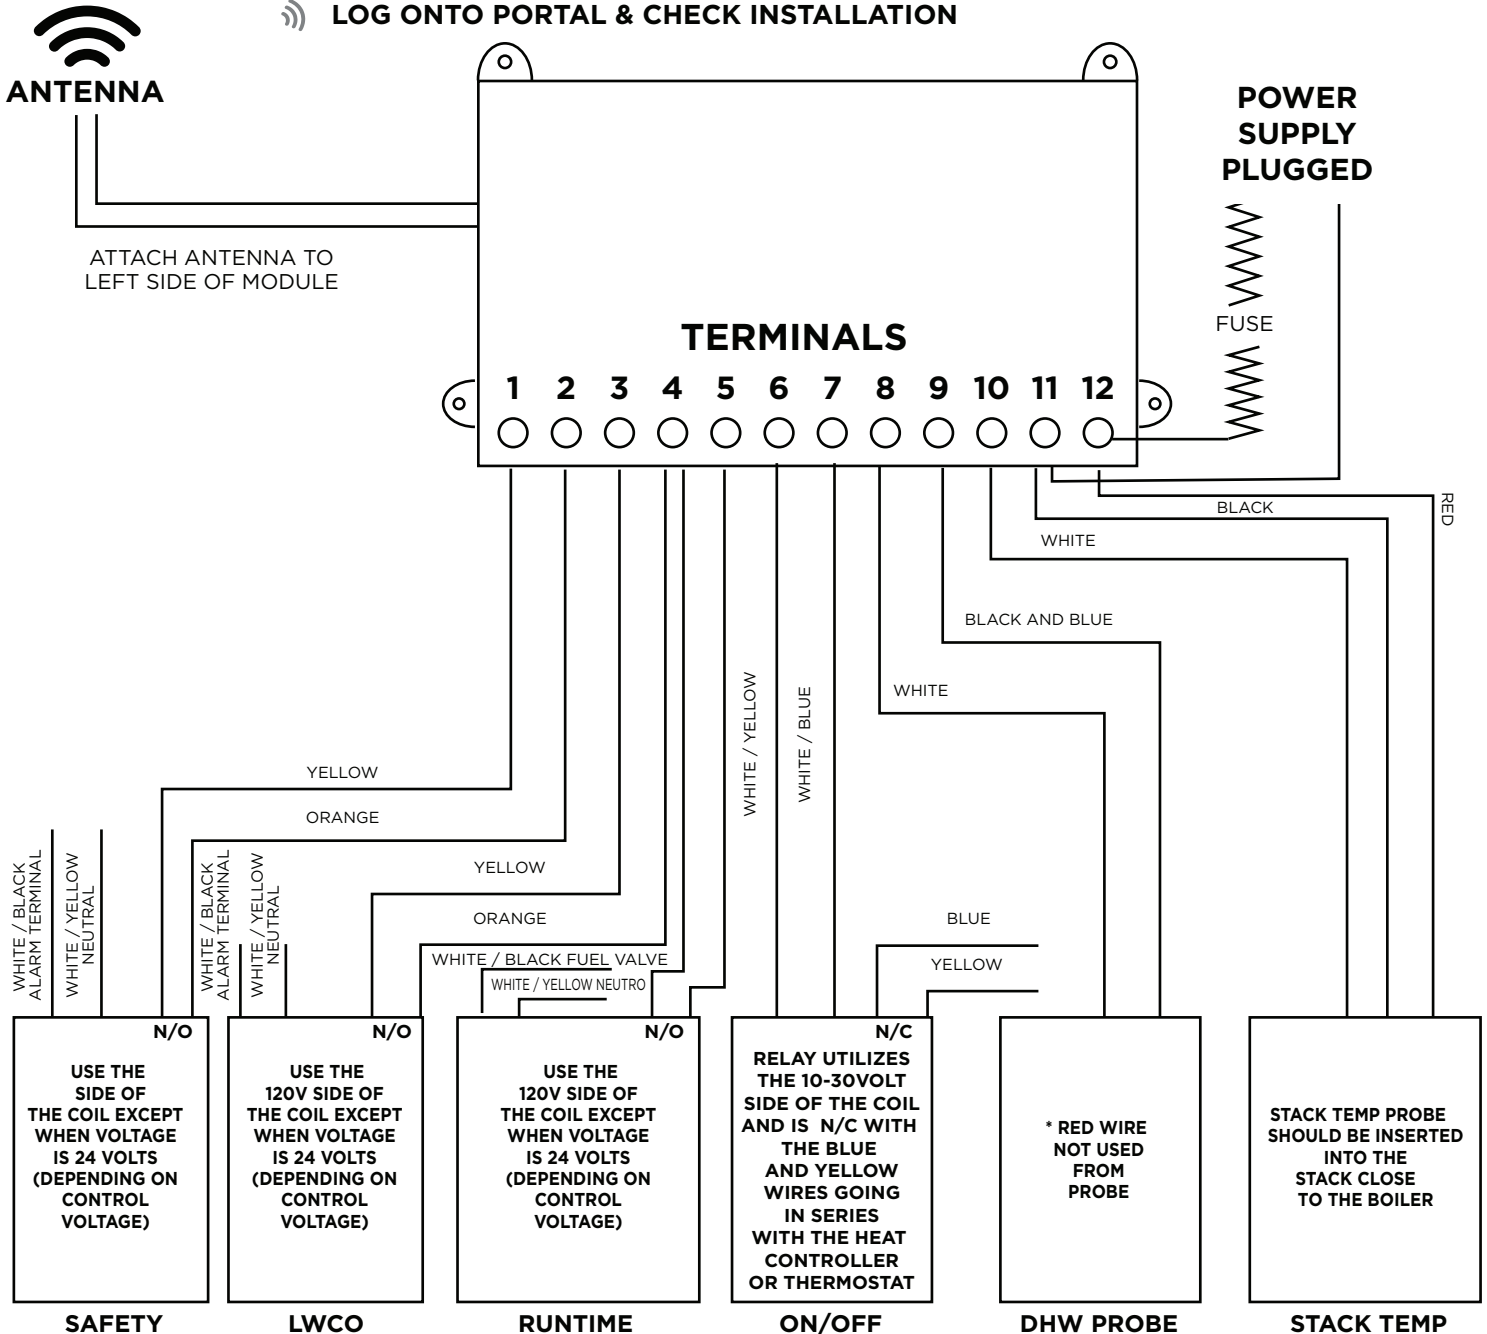

1. MOUNT RIB RELAYS IN BOILER CONTROL PANEL OR 1900 BOXES CLOSE TO CONTROLS

2. ONLY LOW VOLTAGE WIRING CAN BE STRAPPED, ALL LINE VOLTAGE MUST BE IN GREEN FIELD

3. REMOTE ON/OFF RELAY UTILIZES THE N/C WIRES OF RIB RELAY WITH TERMINAL 7 BEING A CONSTANT 12 VOLTS TERMINAL 6 RECEIVES A GROUND WHEN ACTIVATED BY BOILER ALERTS

4. DOMESTIC HOT WATER PROBE CAN BE STRAPPED TO HOT WATER SUPPLY TO THE BUILDING MIN 2 FEET AWAY FROM MIXING VALVE